

Manual Spacer Bar Alignment Rack



As a simple cost effective means of aligning spacer frames with glass as part of insulated glass assembly. The alignment rack is positioned at the end of the glass washer ready to accept the 1st piece of glass followed by the spacer bar which sits against the X and Y axis depth spacers. Finally the second piece of glass butts against the stop and the bar is positioned in the correct place ready to seal. For the alignment rack to work effectively the spacer bar needs either double sided tape or a PIB primary seal. The depth of sealant is determined by the size of the spacer discs which you chose to suit your production.

The size of the alignment rack can be made to suit your washer and maximum glass size.

CONTACT

SALES

☎ 01455 251151

✉ sales@atlantic-machinery.co.uk

STUART HEADINGTON

☎ 07803 758291

✉ s.headington@atlantic-machinery.co.uk



www.atlantic-machinery.co.uk